



**ACCURATE  
FOR LIFE**

# MACHINE CONTROL RECEIVER

**MR360M**


**MACHINE CONTROL  
RECEIVER**  
MAGNET OR CLAMP MOUNT


## INSTRUCTION MANUAL.



# PRODUCT OVERVIEW

MR360 Machine control receiver is an indispensable accessory of rotating laser instrument. The two must be used together. This receiver detects the position of the laser signals transmitted by the rotating laser instrument. It provides quickly and precisely the horizontal and vertical references. This product is characterized by large-scale detecting window, 360° available laser beam receiving, High-bright LED display, low power consumption, good reliability and easy manipulation. It can be used with many different types of rotating laser instrument.

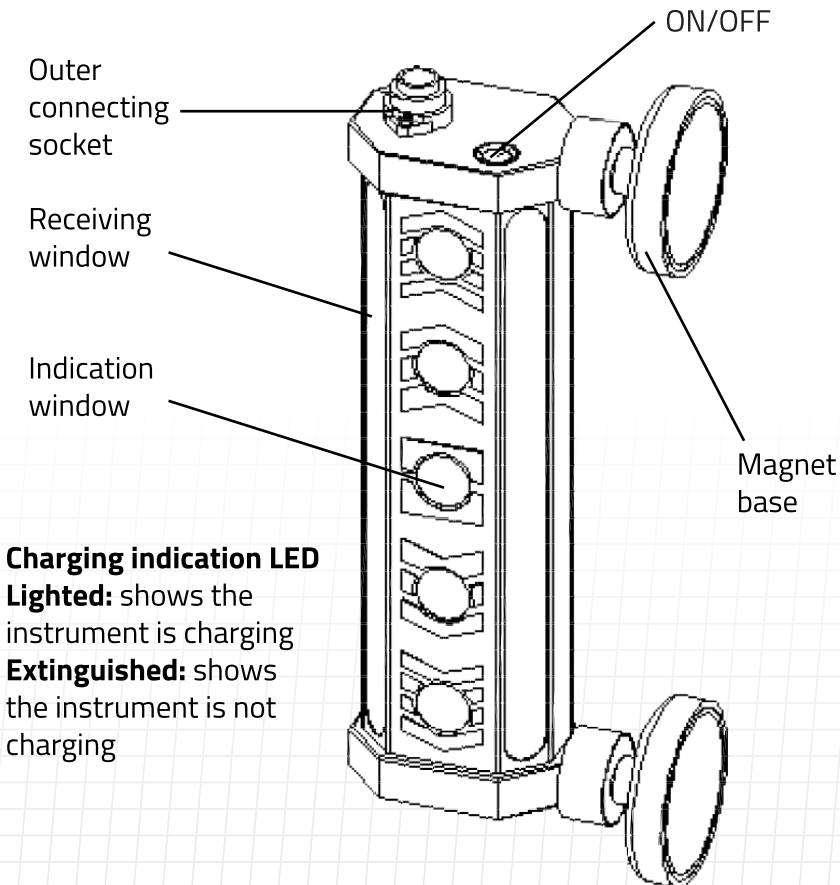

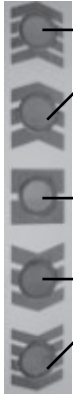

Upper laser indication LED (red) lighted means the laser line is above the zero-line.

Laser zero indication LED (green) lighted means the laser line is level with the zero-line.


Lower laser indication LED (red) lighted means the laser line is below the zero-line.




Power/ fine and coarse measuring switch button: turn power on/off & fine and coarse measuring switch.


## DETECTING METHOD

This product can be used to detect any types of rotating laser instrument.

Short press  button, each LED will blink in turn, which indicates the instrument can start detecting.

The detector is in coarse-detecting mode at the beginning of powering on.

Short press  button once will enter into fine and coarse measuring switch.

Long press  button, the LEDs will blink in turn from the center to both sides. The instrument will be off.

**Note:** pressing the button more than 1 second is long press, less than 1 second, is short press.



# DETECTING METHOD

## CONT.

While the fine and coarse measuring switch, the LEDS shows as follows:

Short press  button










Two LEDs outside will blink three times simultaneously indicates the instrument will be in coarse measuring mode

Short press  button



Two LEDs inside will blink three times simultaneously means the instrument will be in fine measuring mode

### THE LED'S INDICATION WHEN DETECTING AS FOLLOWS

LED's all extinguish	The first upper red LED blink quickly	The second upper red LED blink quickly	The green LED blink quickly	The first lower red LED blink quickly	The second lower red LED blink quickly	The signal LED blink slowly
						
No laser line can detected	The laser line is higher	The laser line is higher	The laser line coincide with the zero-line	The laser line is lower	The laser line is lower	Memorizes the last receiving position and keep display (after removing the laser line)

**Note:** When at low voltage, the instrument will power off automatically. You need to charge the unit in case of this.

# APPLICATION METHOD



Connect the MR360 to the 12V or 24V car storage battery by the offered cable.



Charge the inside rechargeable battery by the special 240 V charger, the charging time is 6 hours.



The MR360 is supplied with remote display, which can be connected to the receiver by the special cable. By installing the remote display inside the cabin this will enable you to view the indicating arrows directly rather than always focusing your eyes on the machine's cutting edge, which makes it possible to locate the receiver higher than the cab to prevent laser beaming blocking and to ensure 360 degree reception.



# MAINTENANCE

1. Keep the instrument clean, particularly the detecting window. If detecting window is dusty, using a cloth gently clean.
2. Avoid knocking, falling on the ground, being wet with water or heated by fire.

# SPECIFICATIONS

SPECIFICATIONS	
Receiving distance	200m
Measuring accuracy	fine: $\pm 3\text{mm}$ to $\pm 12\text{mm}$ course: $\pm 5\text{mm}$ to $\pm 25\text{mm}$
Receiving range	(25cm) receiving window
Receiving angle	360° full
Built-in power	7.2V, 3500mAH Ni-MH battery-pack
Battery life	> 40 hours (built-in battery-pack)
Operating voltage	12V $\pm 10\%$ to 24V $\pm 10\%$
Charging time	6 hours
Dimension	376×80×149mm with magnet 376×120×205mm with clamp holder
Weight	3.1kg
Operating temperature	-20°C to +50°C

## Other Functions

1. Memory function of the last received data and holding display.
2. Outlet socket to connect with remote display
3. Power off automatically at low voltage

## Accessories and requirement

1. Magnet bracket or clamp holder (at least 40mm circular pipe)
2. Cable for connecting external power to 12V or 24V battery
3. Connecting cable for LS707 remote display
4. Input voltage of charger AC 90V to 240V



[WWW.IMEXLASERS.COM](http://WWW.IMEXLASERS.COM)

